



Panasonic RQ-2102 Buttons Replacement

This guide will show how one would replace the buttons on this device.

Written By: Dmitriy Borisyuk



INTRODUCTION



In this guide, you will learn how to replace the plastic buttons on this device. The number one most common problem that we found this device, and others like it, have is that the buttons get stuck. This can be a problem with the actual button itself, whether it has been bent, or a small piece has been snapped off. This guide will show you how to remove and replace one or all of your buttons



TOOLS:




- [Phillips #0 Screwdriver](#) (1)
-

Step 1 — Buttons

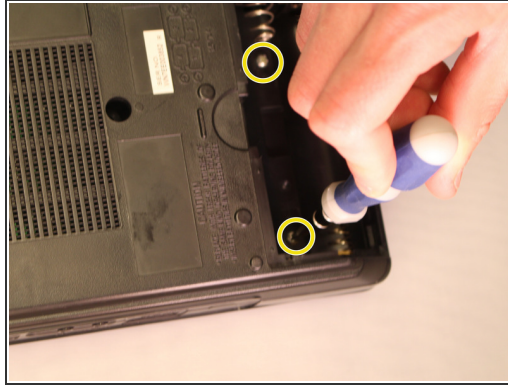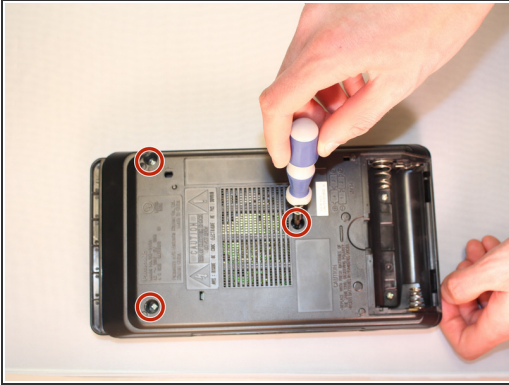


- Remove the three screws from the back of the device body.
 - Remove both screws from battery compartment.
 - Remove the back.
- ⚠ Make sure not to pull apart the cords that connect the device.

Step 2

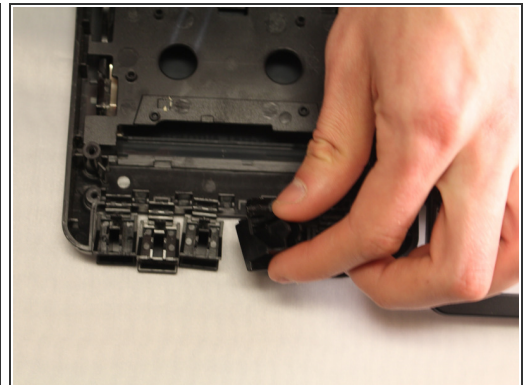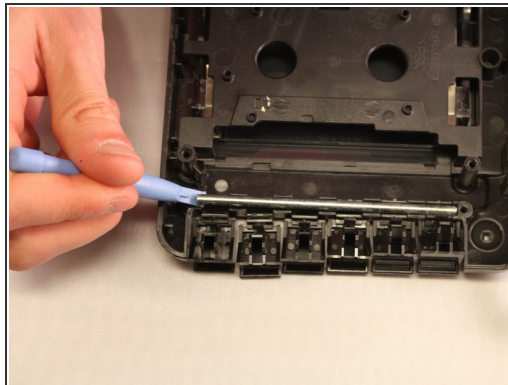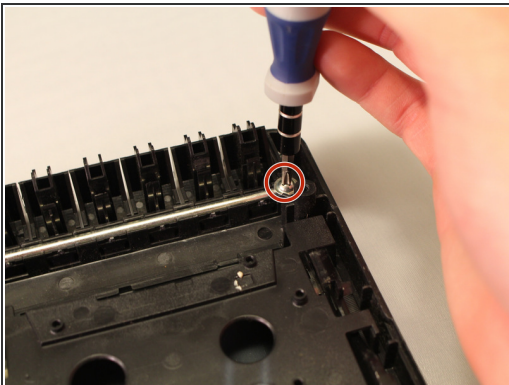

- Remove screws from the sides of the silver button pin roller.
- Pry out the silver bar
- Remove the desired button

Step 3

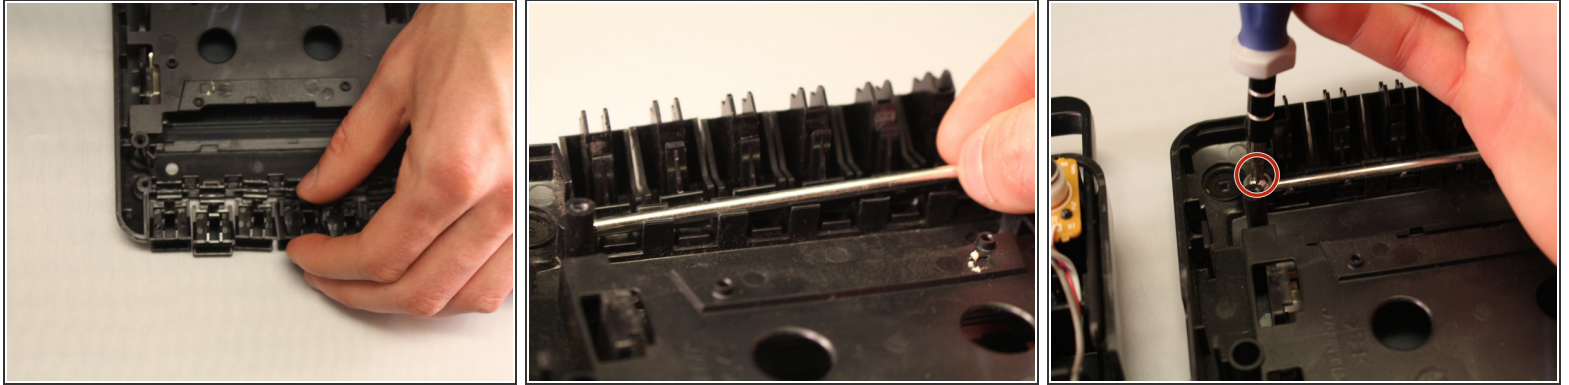

- Insert the new button in place of the old button.
 - Put the silver pin roller back into its place over the buttons.
 - Put screws back into their original places by the sides of the silver pin roller.
- i* If new buttons are not available, clean old buttons with a wet rag.
- i* If the buttons do not work, ensure they are in their correct positions.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-25 04:35:47 AM.